




SILENT KNIGHT

by Honeywell

Model 5700 Basic Operating Instructions

These Instructions must be framed and displayed next to the 5700 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72. Refer to Installation Manual P/N 151295.

Operation	Task to Perform
Silence Alarms and Troubles	Press then enter a code if prompted. Silence LED will light.
Reset Alarms	Press then enter a code if prompted.
Acknowledge Alarms and Troubles	Press then enter a code if prompted. When the Alarm or Trouble is acknowledged an will appear in the annunciator display as shown Below. 
View Alarms and Troubles	Press the or button to view Alarms and Troubles.
Conduct a Fire Drill	<ol style="list-style-type: none"> 1. Press to access Main Menu, then enter a code if prompted. 2. Then press to select System Tests. 3. Enter code if prompted, then press to select Fire Drill. 4. Press to start the fire drill. 5. Press to end the fire drill.
View a Points Status	<ol style="list-style-type: none"> 1. Press to access Main Menu, then enter a code if prompted. 2. Then press to select Point Functions. 3. Enter code if prompted, then press to select Point Status. 4. Select the module the device is located on by using the or . Then press . 5. Enter the point number.
Check Detector Sensitivity	<ol style="list-style-type: none"> 1. Follow steps 1 through 5 for viewing a point status. 2. Press to view detector sensitivity.
Set Time and Date	<ol style="list-style-type: none"> 1. Press to access Main Menu, then enter a code if prompted. 2. Then press to select Set Time & Date. Enter a code if prompted 3. Make changes in the fields on the screen as necessary. 4. Press if you wish to keep the changes. 5. Press to set the entered time and date.
Enable / Disable a Point	<ol style="list-style-type: none"> 1. Rotate the key or enter a code to access to access Main Menu. 2. Then press to select Point Functions. 3. Press to select Disable / Enable Point. 4. Press to Disable / Enable Pt. 5. Use the or to move through the list. Then press to select the module where the point you want to disable/enable is located 6. Enter the point or circuit number that you want to disable/enable. 7. Press key to toggle between NORMAL (enable) or DISABLE.
View Event History	<ol style="list-style-type: none"> 1. Press to access Main Menu, then enter a code if prompted. 2. Press to select Event History. 3. Press the or to view events in the history buffer.

Cut Along the Dotted Line